Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

To remove the optional finisher, its bins, and its stand, complete the following sections.

Preparing for disassembly

1. Turn the power off.
2. Remove all print media from the bins.

Removing the bins

1. Grasp the top bin (bin 1) and tilt it up.

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

2 Pull the bin straight out

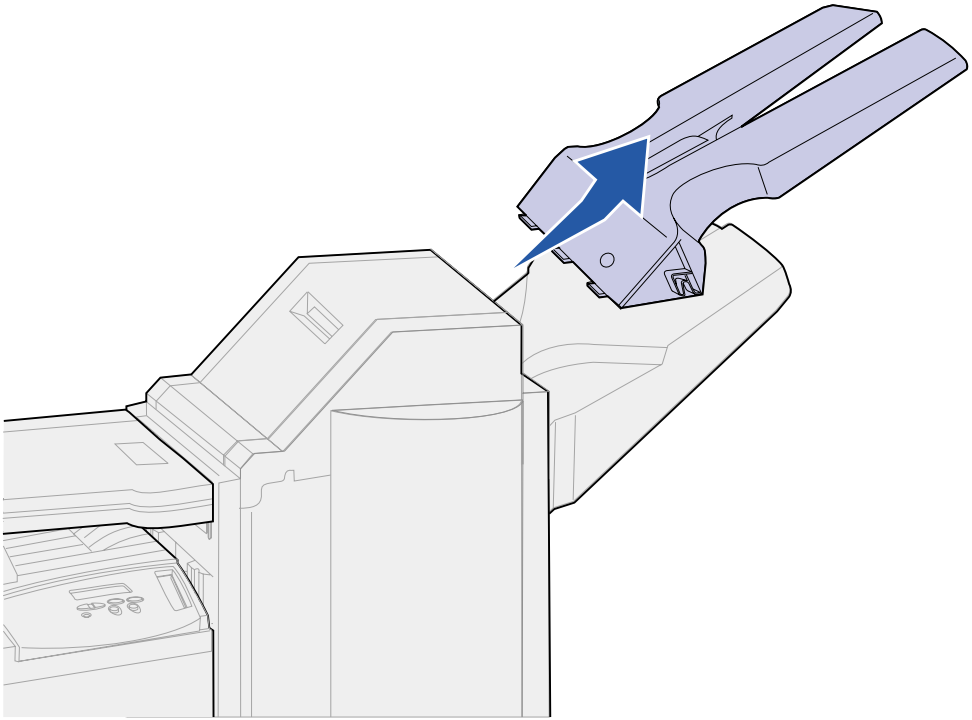

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

3 Loosen the two screws under the bottom bin (bin 2).

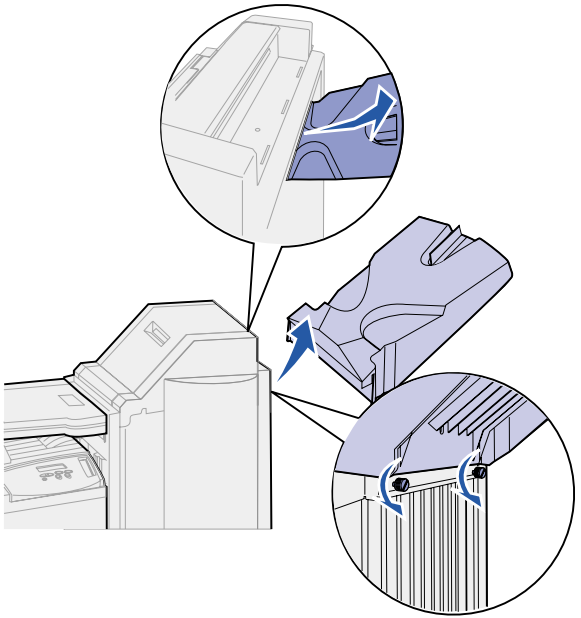

4 Lift the bin and pull it straight out.

5 Set the bins aside.

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Disconnecting the finisher from the printer

1 Push the finisher release latch.

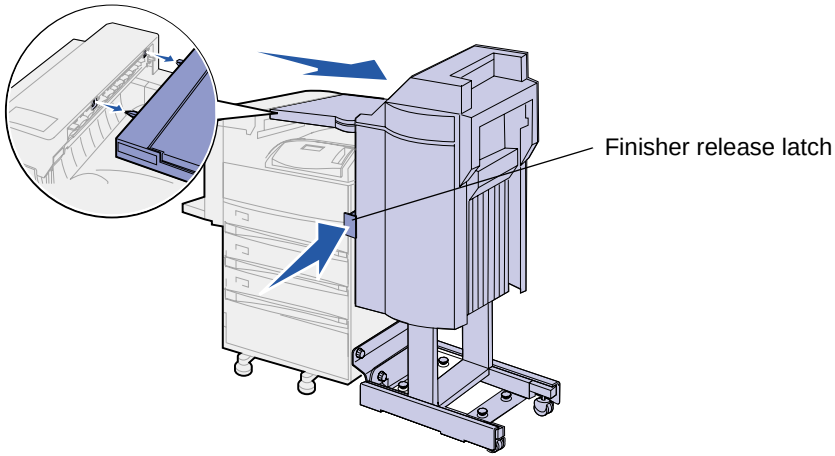

2 Push the finisher away from the printer.

Note: The finisher slides to the right while still on its stand.

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

3 Locate the cable connecting the transport unit to the finisher.

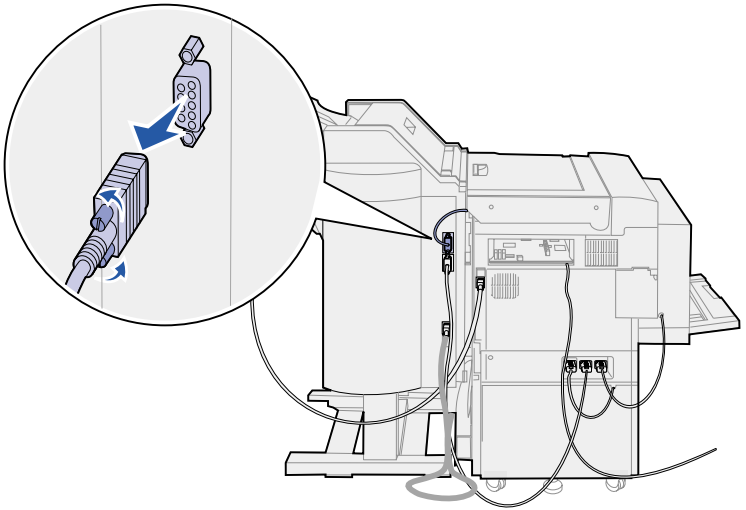

4 Loosen the two thumbscrews on each side of the connector.

5 Disconnect the plug from the finisher.

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

6 Locate the finisher power cable on the printer.

7 Press down on the tab on the cable plug, and then pull the plug out.

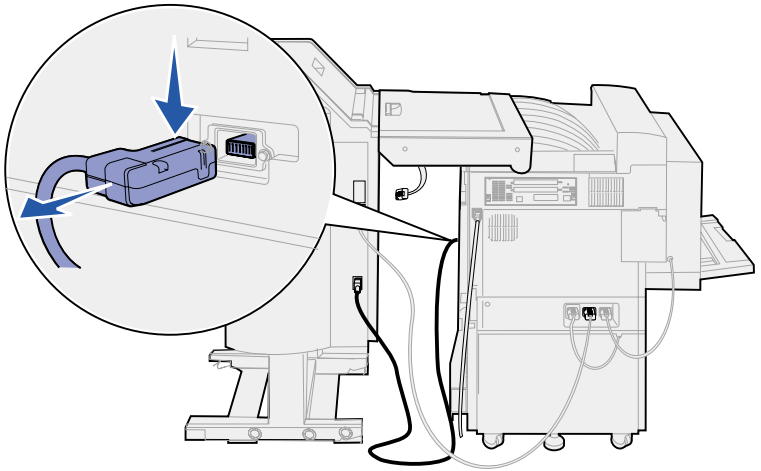

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

8 Locate the other end of this cable in the lower of the three connectors.

9 Pull the plug straight out.

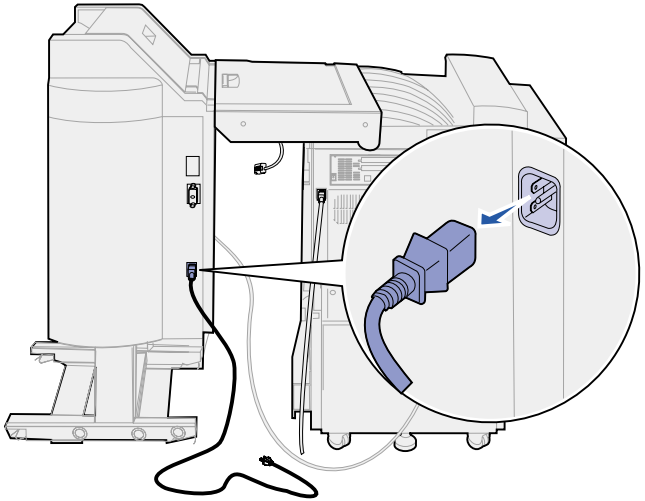

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

10 Disconnect the finisher cable from the back of the printer

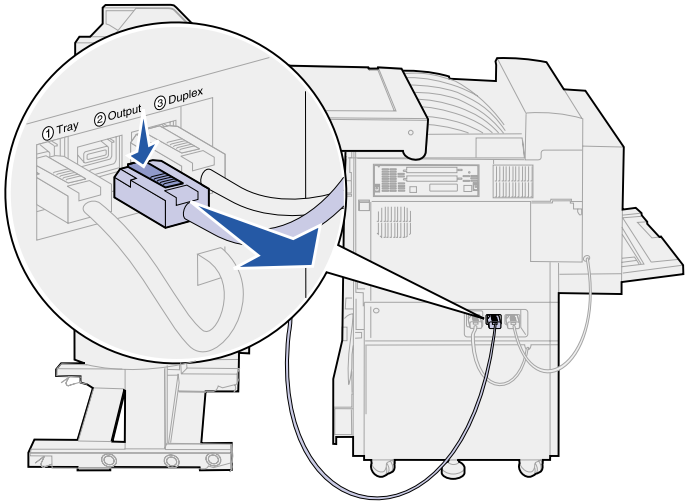

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

11 Locate the other end of this cable in the middle connector on the back of the finisher.

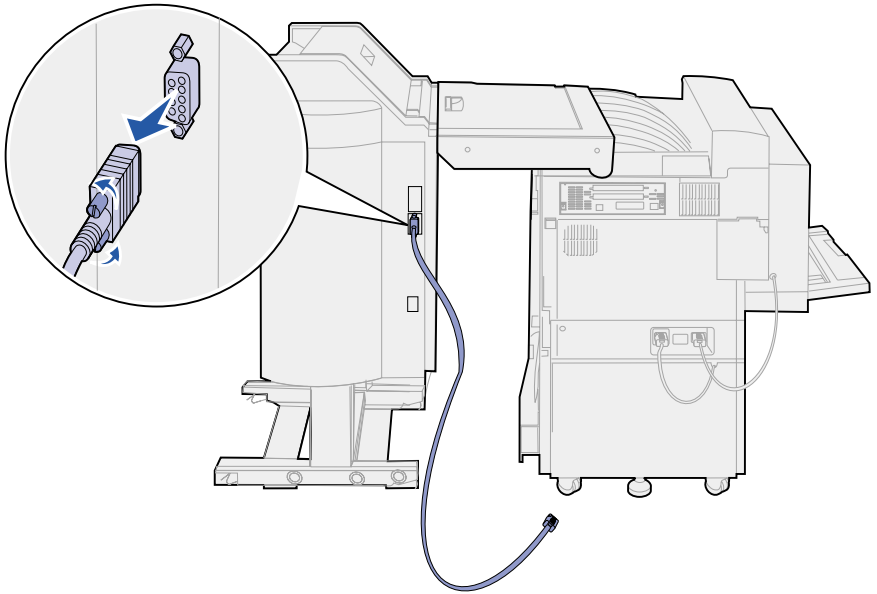

12 Loosen the thumbscrews on each side of the plug, and pull the plug straight out.

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Removing the finisher from the stand

CAUTION! This procedure should be completed by two people to avoid injury. Ask someone to help you move the finisher.

1 Hold down the left side of the black lever on the bottom rear of the stand.

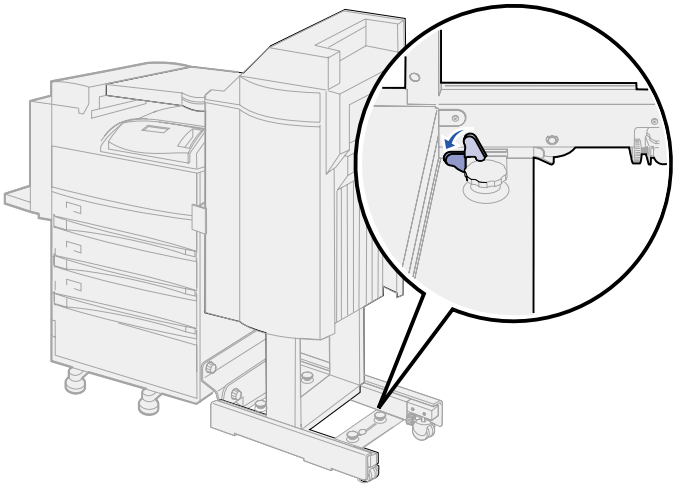

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

2 Have someone push the finisher away from the printer until it slides off the stand.

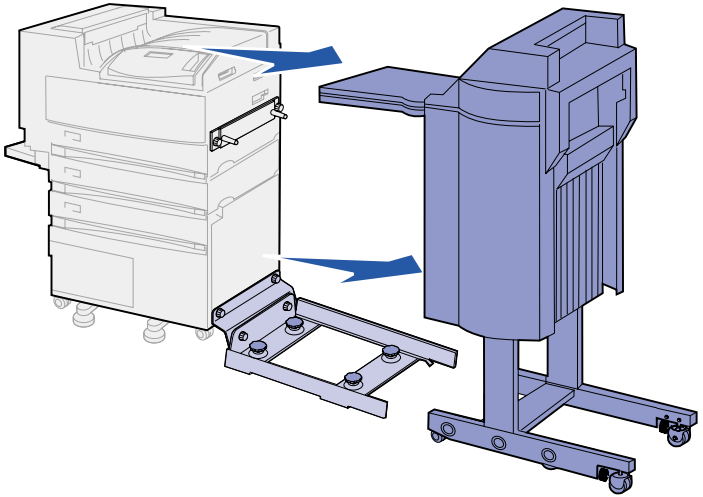

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Removing the divertor cover

1 Pull the two tabs on the divertor cover straight out using a flat blade screwdriver or a flat key.

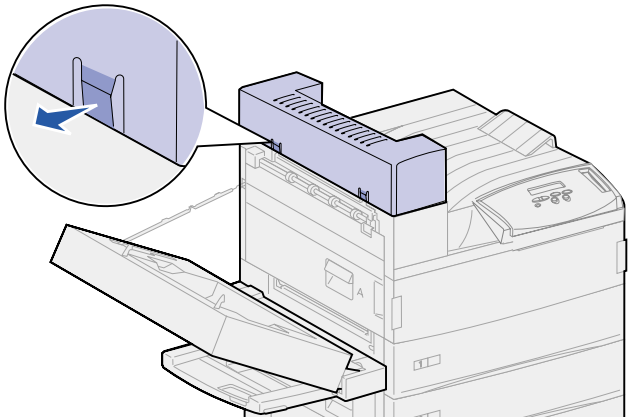

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

2 Rotate the divertor cover up and over toward the standard bin to release it.

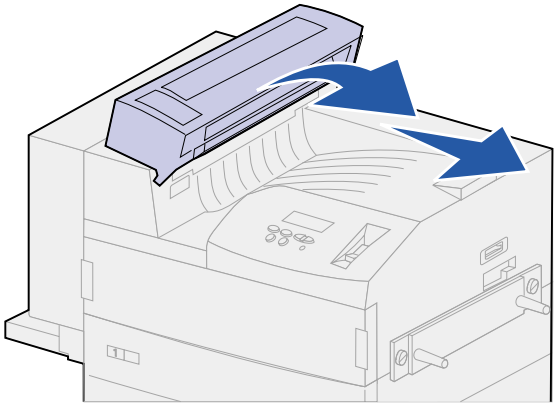

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Removing the transport unit

1 While supporting the transport unit, swing the two vertical support levers up. They *snap* into place in the bottom of the transport unit.

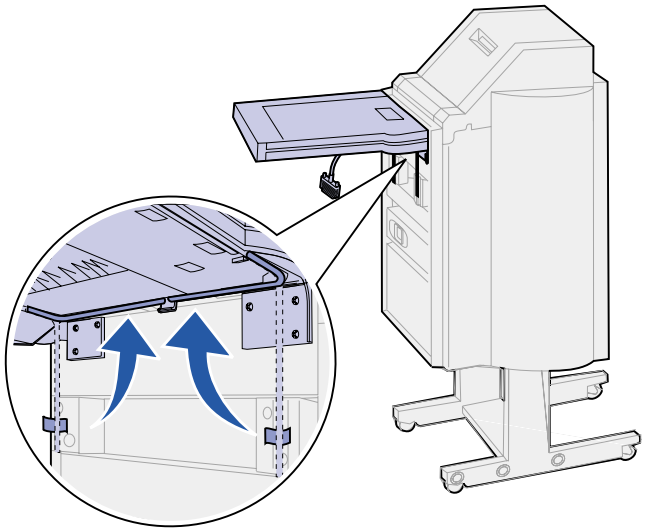

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

2 Gently lower the transport unit into its vertical position.

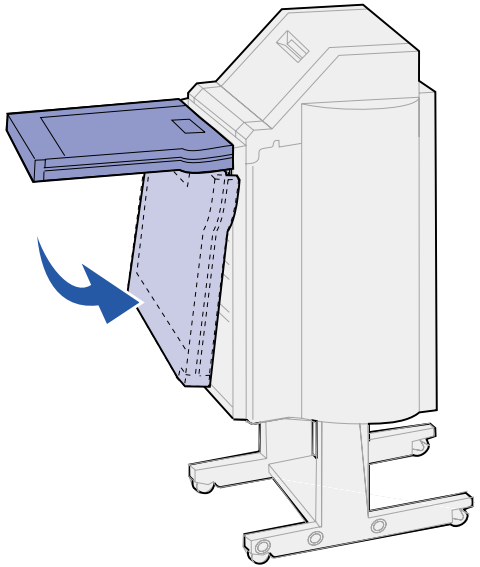

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

3 Grasp the transport unit on each side, and then lift it straight up and off the finisher.

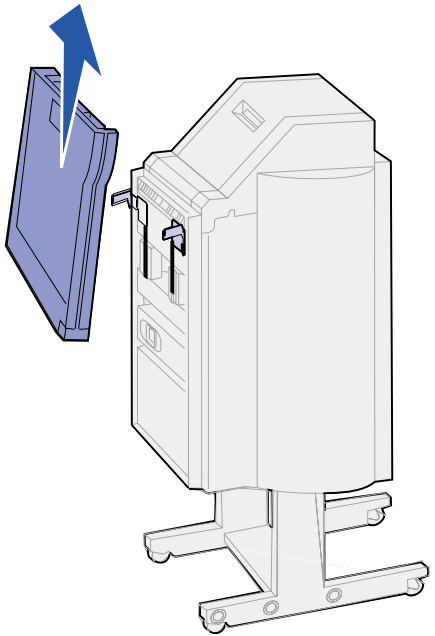

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Disassembling the stand

The finisher stand consists of two metal pieces. The guide rail holding plate is attached directly to the printer. The guide rail is attached to guide rail holding plate.

1. Loosen the two screws on the guide rail.
2. Pull the guide rail away from the guide rail holding plate and set it aside.

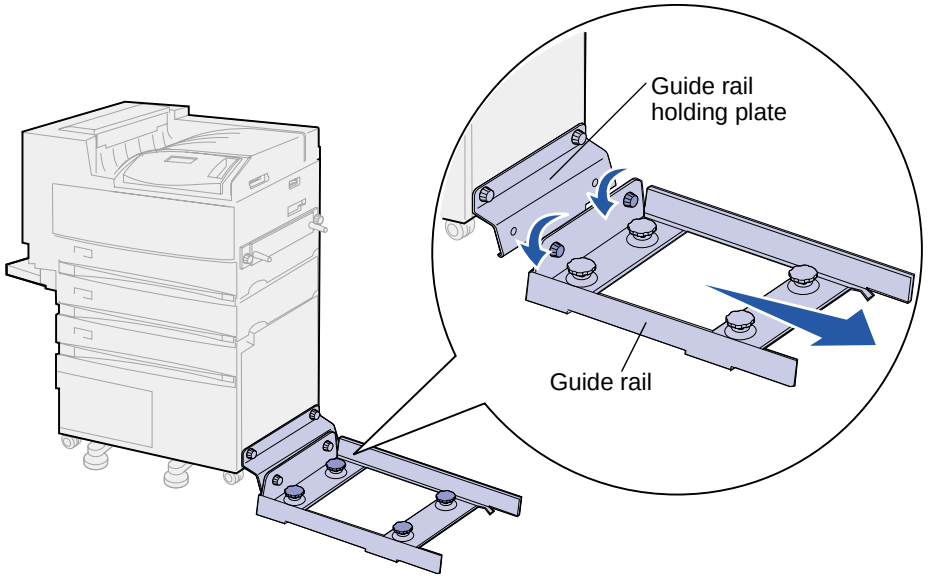

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

3 Loosen the two screws on the guide rail holding plate.

4 Pull the guide rail holding plate off, and set it aside.

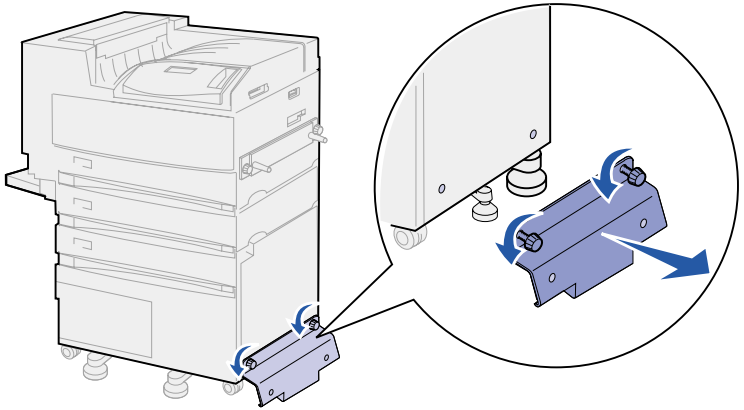

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

Removing the finisher plate

1 Loosen the screws on the finisher plate attached to the right side of the printer.

2 Pull the finisher plate straight off.

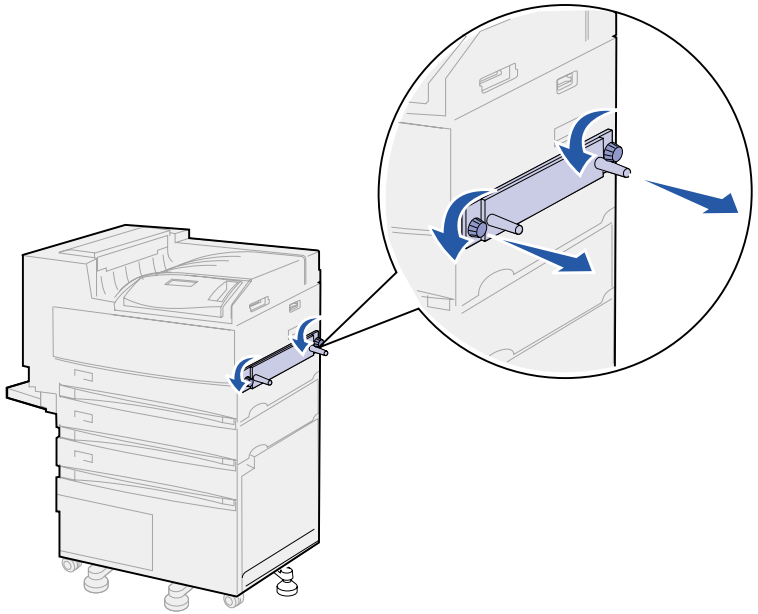

Printing
Paper handling
Maintenance
Troubleshooting
Administration
Index

3 Reattach the stacking arm. See **Reinstalling the stacking arm** for more information.

4 Turn the printer on. ▲